



DM5


DM1 1S(OT) - DM1 1S(IT)

DM1 2S(OT) - DM1 2S(IT)

DM5 parts list




STANDARD DEMOTOOLS

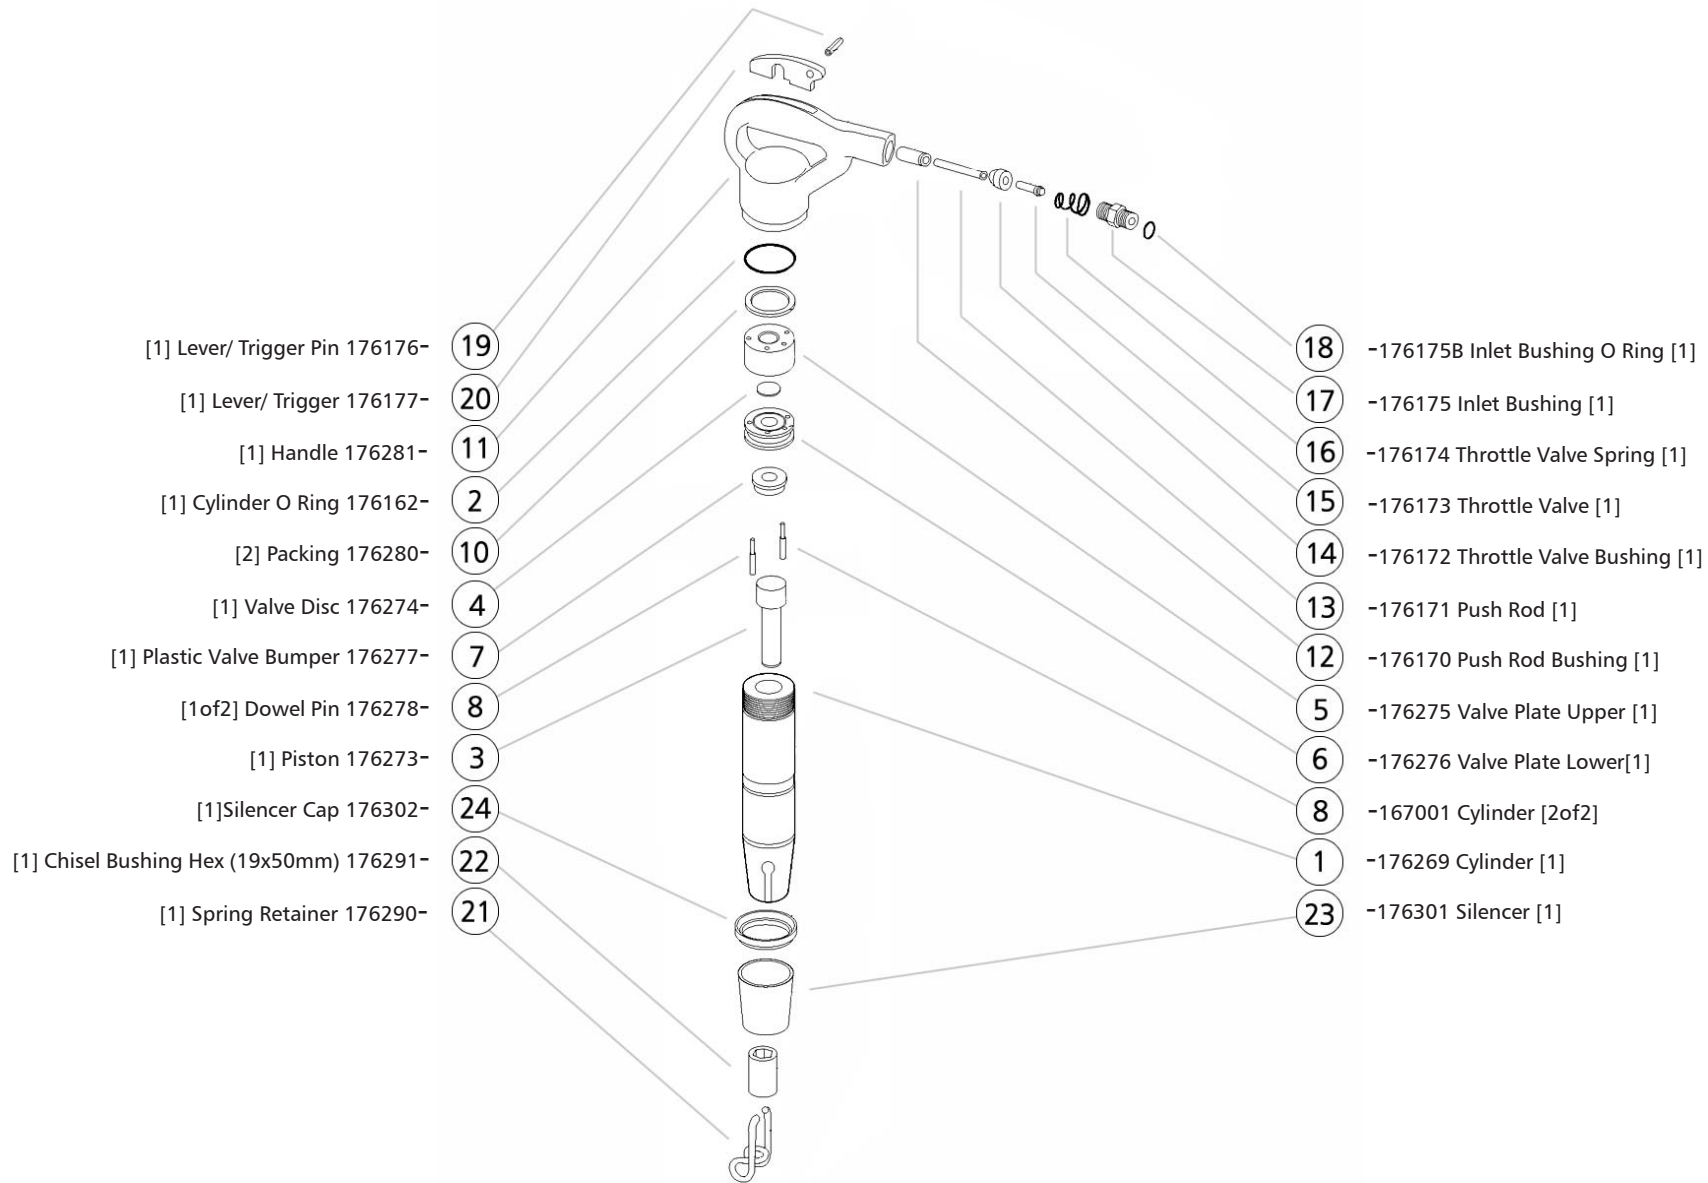

DM11S parts list



STANDARD DEMOTOOLS

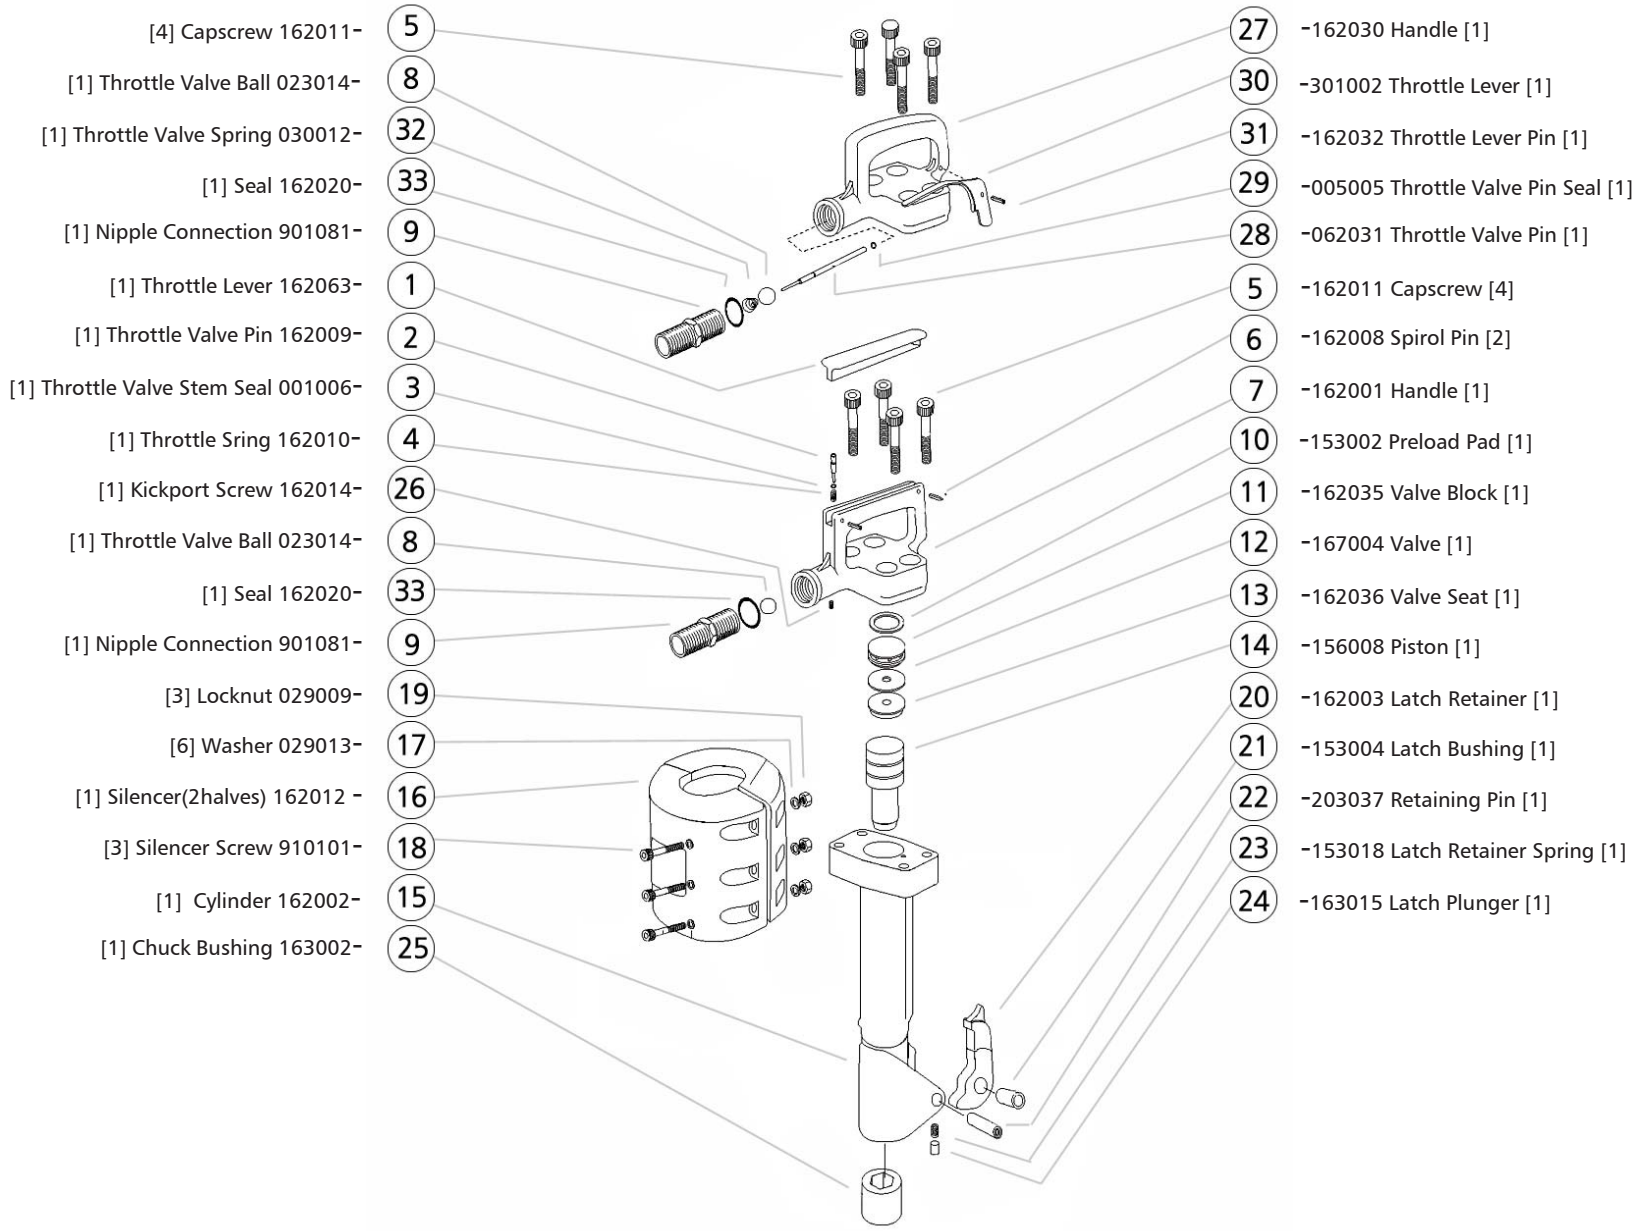

- [4] Capscrew 162011- 5
- [1] Throttle Valve Ball 023014- 8
- [1] Throttle Valve Spring 030012- 32
- [1] Seal 162020- 33
- [1] Nipple Connection 901081- 9
- [1] Throttle Lever 162063- 1
- [1] Throttle Valve Pin 162009- 2
- [1] Throttle Valve Stem Seal 001006- 3
- [1] Throttle Spring 162010- 4
- [1] Kickport Screw 162014- 26
- [1] Throttle Valve Ball 023014- 8
- [1] Seal 162020- 33
- [1] Nipple Connection 901081- 9
- [3] Locknut 029009- 19
- [6] Washer 029013- 17
- [1] Silencer(2halves) 162012 - 16
- [3] Silencer Screw 910101- 18
- [1] Cylinder 162002- 15
- [1] Chuck Bushing 163002- 25

- 162030 Handle [1] 27
- 301002 Throttle Lever [1] 30
- 162032 Throttle Lever Pin [1] 31
- 005005 Throttle Valve Pin Seal [1] 29
- 062031 Throttle Valve Pin [1] 28
- 162011 Capscrew [4] 5
- 162008 Spirol Pin [2] 6
- 162001 Handle [1] 7
- 153002 Preload Pad [1] 10
- 162035 Valve Block [1] 11
- 167004 Valve [1] 12
- 162036 Valve Seat [1] 13
- 156008 Piston [1] 14
- 162003 Latch Retainer [1] 20
- 153004 Latch Bushing [1] 21
- 203037 Retaining Pin [1] 22
- 153018 Latch Retainer Spring [1] 23
- 163015 Latch Plunger [1] 24

DM12S parts list



STANDARD DEMOTOOLS

