




1615 - 2315 - 2615

1615 parts list



STANDARD DRILLS

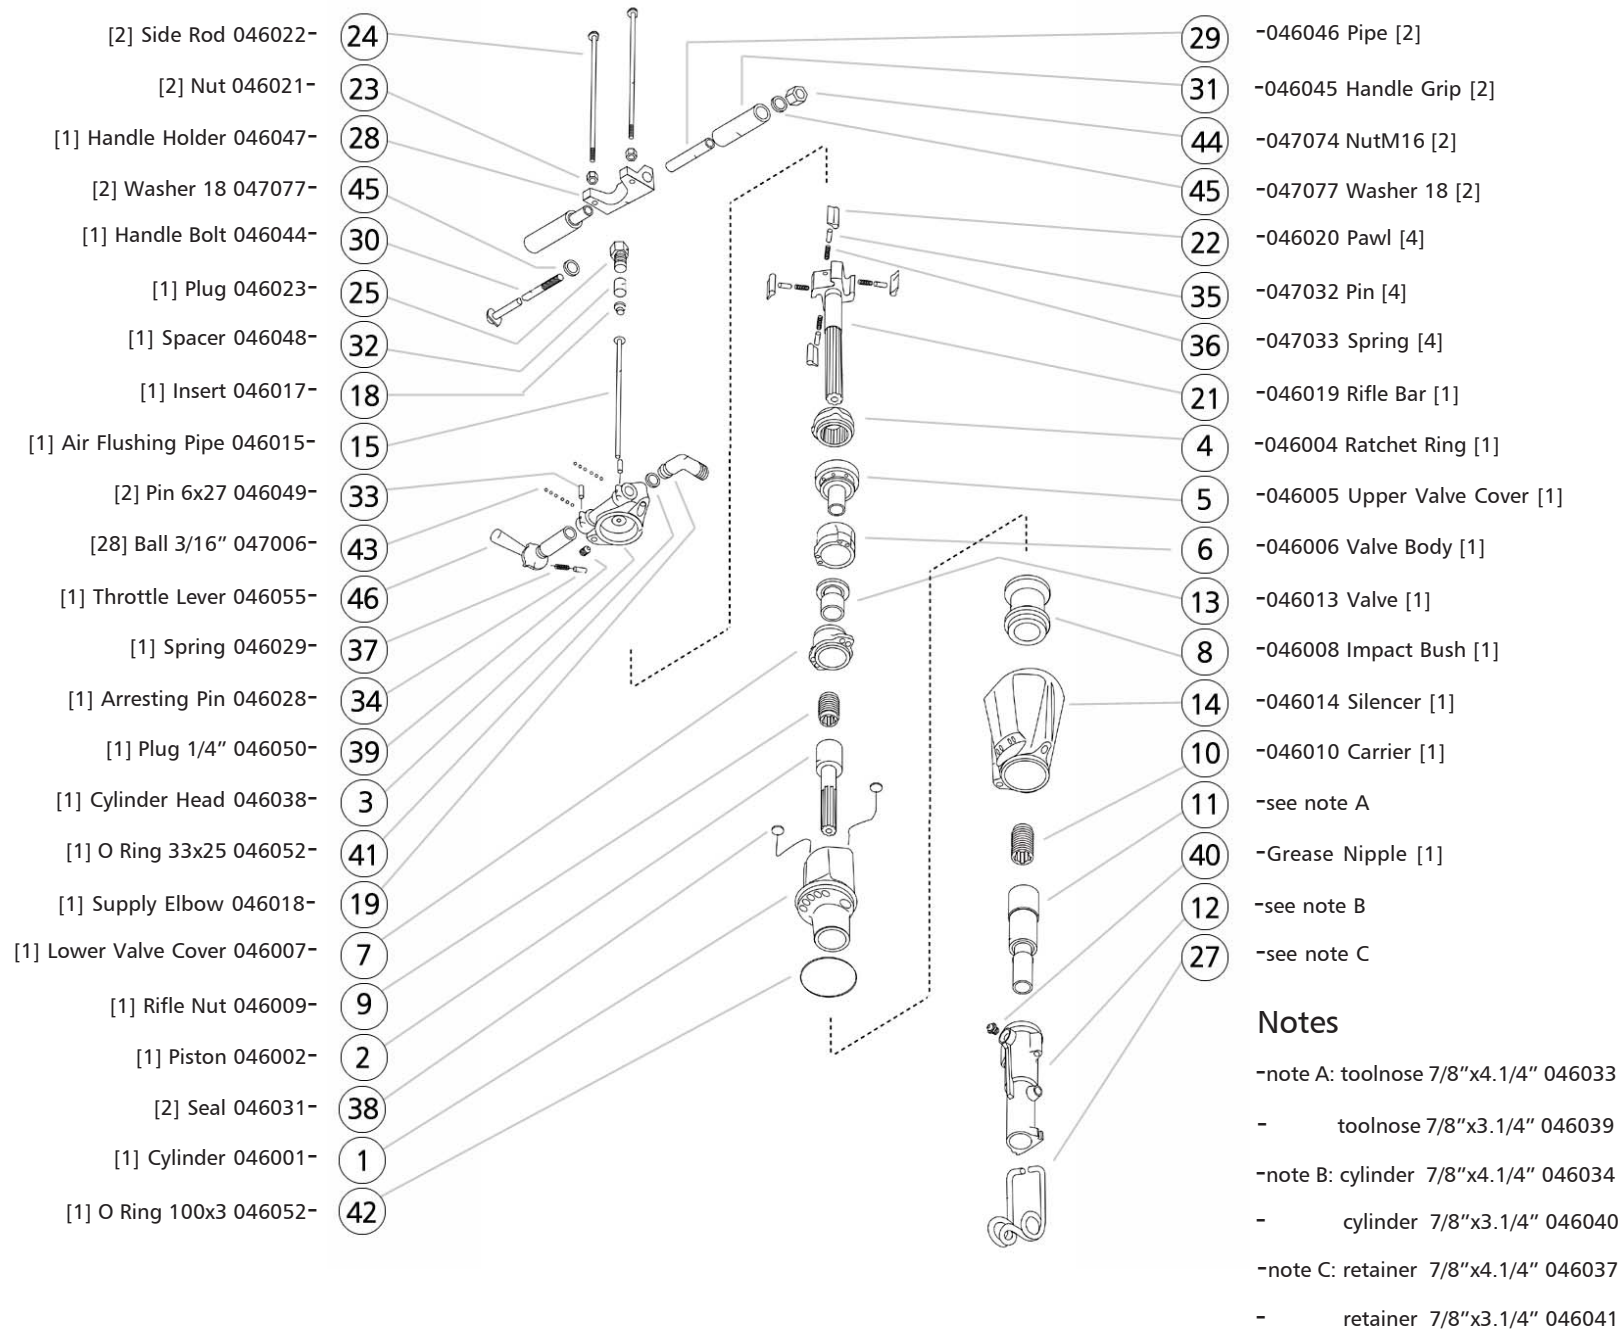


Notes

- note A: toolnose 7/8"x4.1/4" 046033
- toolnose 7/8"x3.1/4" 046039
- note B: cylinder 7/8"x4.1/4" 046034
- cylinder 7/8"x3.1/4" 046040
- note C: retainer 7/8"x4.1/4" 046037
- retainer 7/8"x3.1/4" 046041

2315 parts list



STANDARD DRILLS

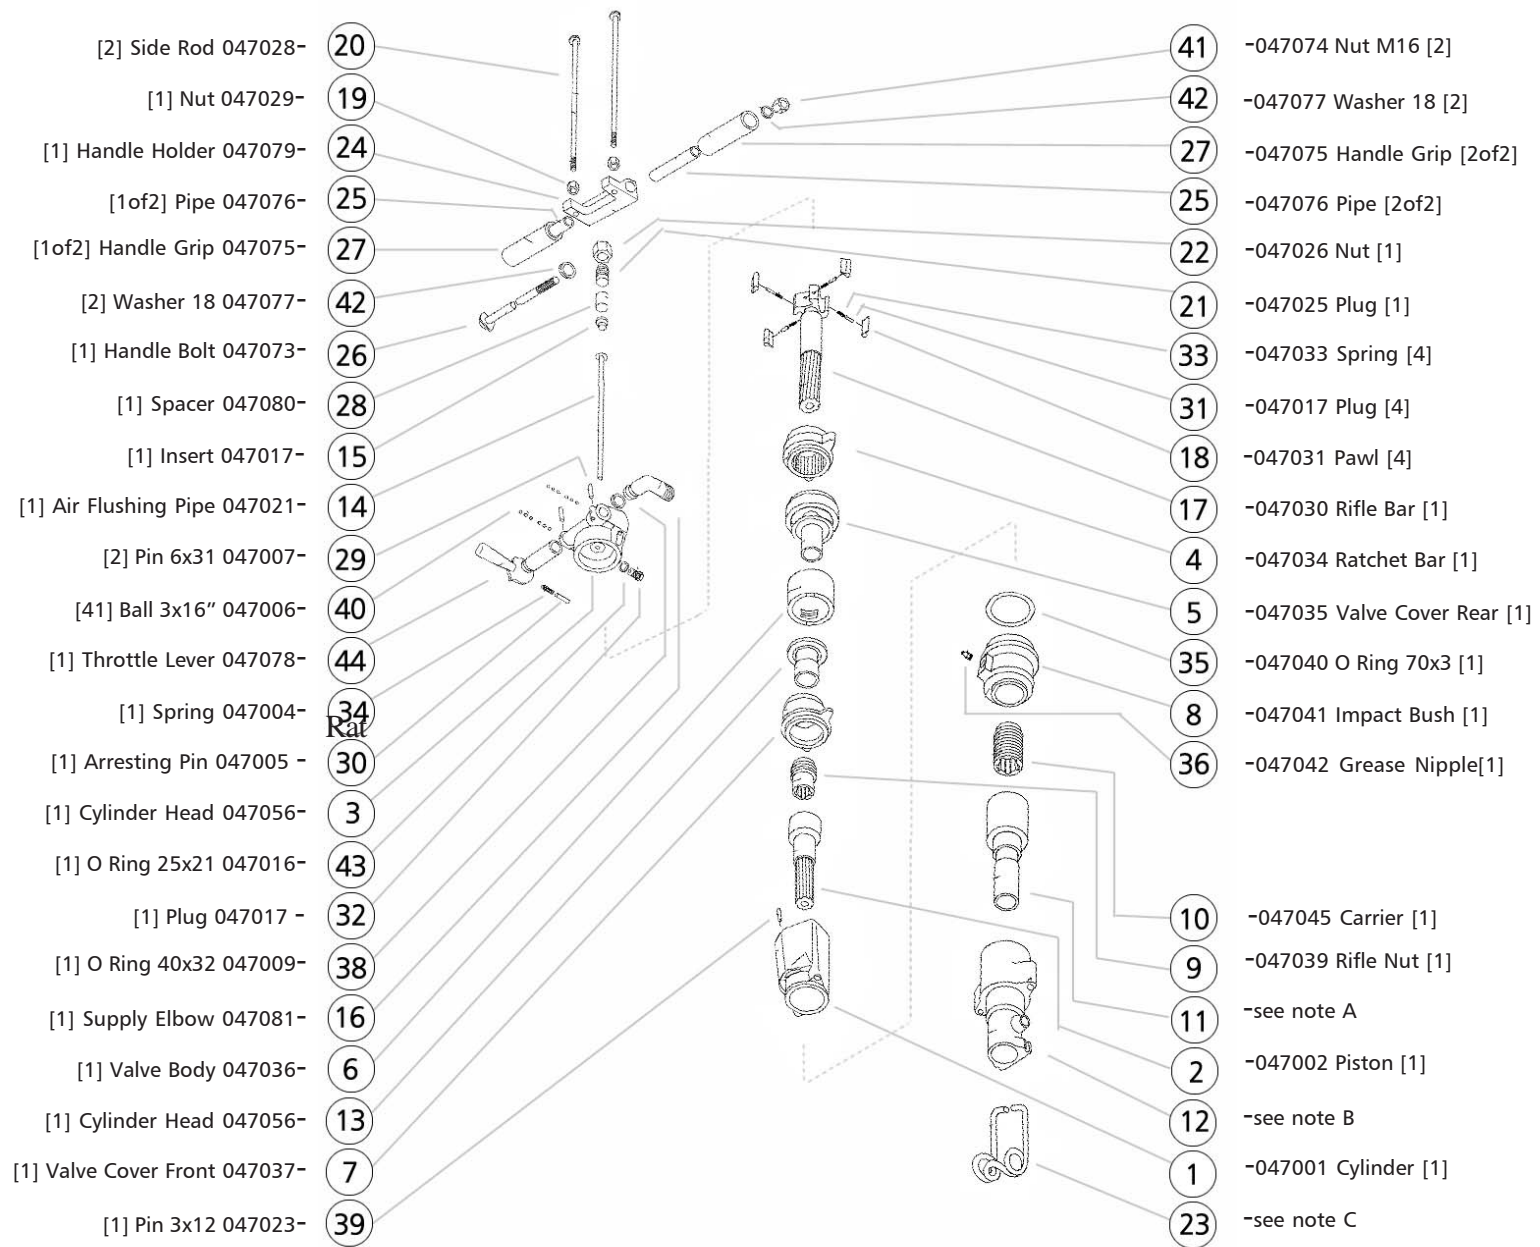

- [2] Side Rod 047028- (20)
- [1] Nut 047029- (19)
- [1] Handle Holder 047079- (24)
- [1of2] Pipe 047076- (25)
- [1of2] Handle Grip 047075- (27)
- [2] Washer 18 047077- (42)
- [1] Handle Bolt 047073- (26)
- [1] Spacer 047080- (28)
- [1] Insert 047017- (15)
- [1] Air Flushing Pipe 047021- (14)
- [2] Pin 6x31 047007- (29)
- [41] Ball 3x16" 047006- (40)
- [1] Throttle Lever 047078- (44)
- [1] Spring 047004- (34)
- [1] Arresting Pin 047005 - (30)
- [1] Cylinder Head 047056- (3)
- [1] O Ring 25x21 047016- (43)
- [1] Plug 047017 - (32)
- [1] O Ring 40x32 047009- (38)
- [1] Supply Elbow 047081- (16)
- [1] Valve Body 047036- (6)
- [1] Cylinder Head 047056- (13)
- [1] Valve Cover Front 047037- (7)
- [1] Pin 3x12 047023- (39)

- (41) -047074 Nut M16 [2]
- (42) -047077 Washer 18 [2]
- (27) -047075 Handle Grip [2of2]
- (25) -047076 Pipe [2of2]
- (22) -047026 Nut [1]
- (21) -047025 Plug [1]
- (33) -047033 Spring [4]
- (31) -047017 Plug [4]
- (18) -047031 Pawl [4]
- (17) -047030 Rifle Bar [1]
- (4) -047034 Ratchet Bar [1]
- (5) -047035 Valve Cover Rear [1]
- (35) -047040 O Ring 70x3 [1]
- (8) -047041 Impact Bush [1]
- (36) -047042 Grease Nipple[1]
- (10) -047045 Carrier [1]
- (9) -047039 Rifle Nut [1]
- (11) -see note A
- (2) -047002 Piston [1]
- (12) -see note B
- (1) -047001 Cylinder [1]
- (23) -see note C

Notes


-note A: toolnose 7/8"x3.1/4" 047060	-note B: cylinder 7/8"x3.1/4" 047063	-note C: retainer 7/8"x3.1/4" 046065
- toolnose 7/8"x4.1/4" 047061	- cylinder 7/8"x4.1/4" 047046	- retainer 7/8"x4.1/4" 047047
- toolnose 7/8"x1" 047062	- cylinder 7/8"x1" 047046	- retainer 7/8"x1" 046066

2615 parts list



STANDARD DRILLS

- [1] Cylinder 048001- (1)
- [1] Piston 048002- (2)
- [1] Cylinder Head 048003- (3)
- [1] Spring 047004- (4)
- [1] Lock Pin 047005- (5)
- [51] Ball 047006- (6)
- [3] Pin 047007- (7)
- [1] Supply Elbow 047008- (8)
- [1] Seal 047009- (9)
- [1] Supply Elbow 048004- (10)
- [2] Valve 047010- (11)
- [28] Insert 047011- (14)
- [1] Starting Pin 047012- (15)
- [1] Starting Rod 047013- (16)
- [1] Seal 047014- (17)
- [4] Seal 047015- (18)
- [1] Seal 047016- (19)
- [1] Plug 047017- (20)
- [1] Seal 047018- (22)
- [1] Spring 047019- (23)
- [1] Washing Tube 048005- (25)
- [1] Air Washing Tube 048006- (26)
- [1] Insert 048007- (27)
- [2] Packaging 048008- (28)
- [1] Insert 047024- (29)
- [1] Plug 047025- (30)
- [1] Counternut 047026- (31)

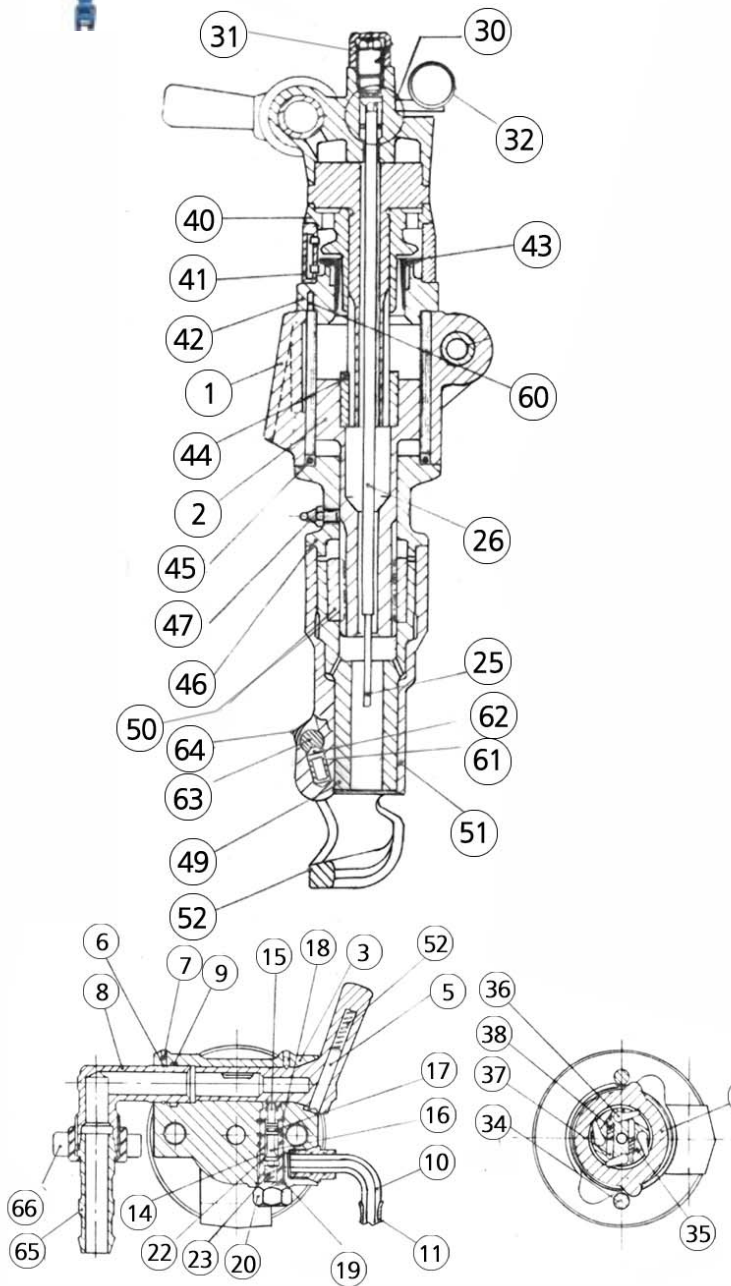

- (32) -047052 T Handle [1]
- (33) -048009 Tensioning Bolt [2]
- (34) -047029 Nut [2]
- (35) -048010 Helical Carrier [1]
- (36) -047031 Pawl [4]
- (37) -047032 Pin [4]
- (38) -047033 Spring [4]
- (39) -047034 Ratchet Wheel [1]
- (40) -047035 Valve Cover Rear [1]
- (41) -048011 Valve Body [1]
- (42) -048012 Valve Cover Rear [1]
- (43) -047038 Valve (Distribution) [1]
- (44) -048013 Carrier Nut [1]
- (45) -048014 Seal [1]
- (46) -048015 Impact Bushing [1]
- (47) -047042 Lubricator [1]
- (48) -047043 Washer [1]
- (49) -048016 Toolnose [1]
- (50) -047045 Carrier [1]
- (51) -048028 Cylinder Cover [1]
- (52) -048018 Stirrup [1]
- (60) -047053 Pin [1]
- (61) -048023 Location Spring [2]
- (62) -048024 Location Pin [2]
- (63) -048025 Stirrup Pin [1]
- (64) -048026 Stirrup Pin Nut [1]
- (65) -047071 Air Supply Tail [1]

66-047072 Air Supply Tail Nut [1]