


28SVRT parts list



VR BREAKERS

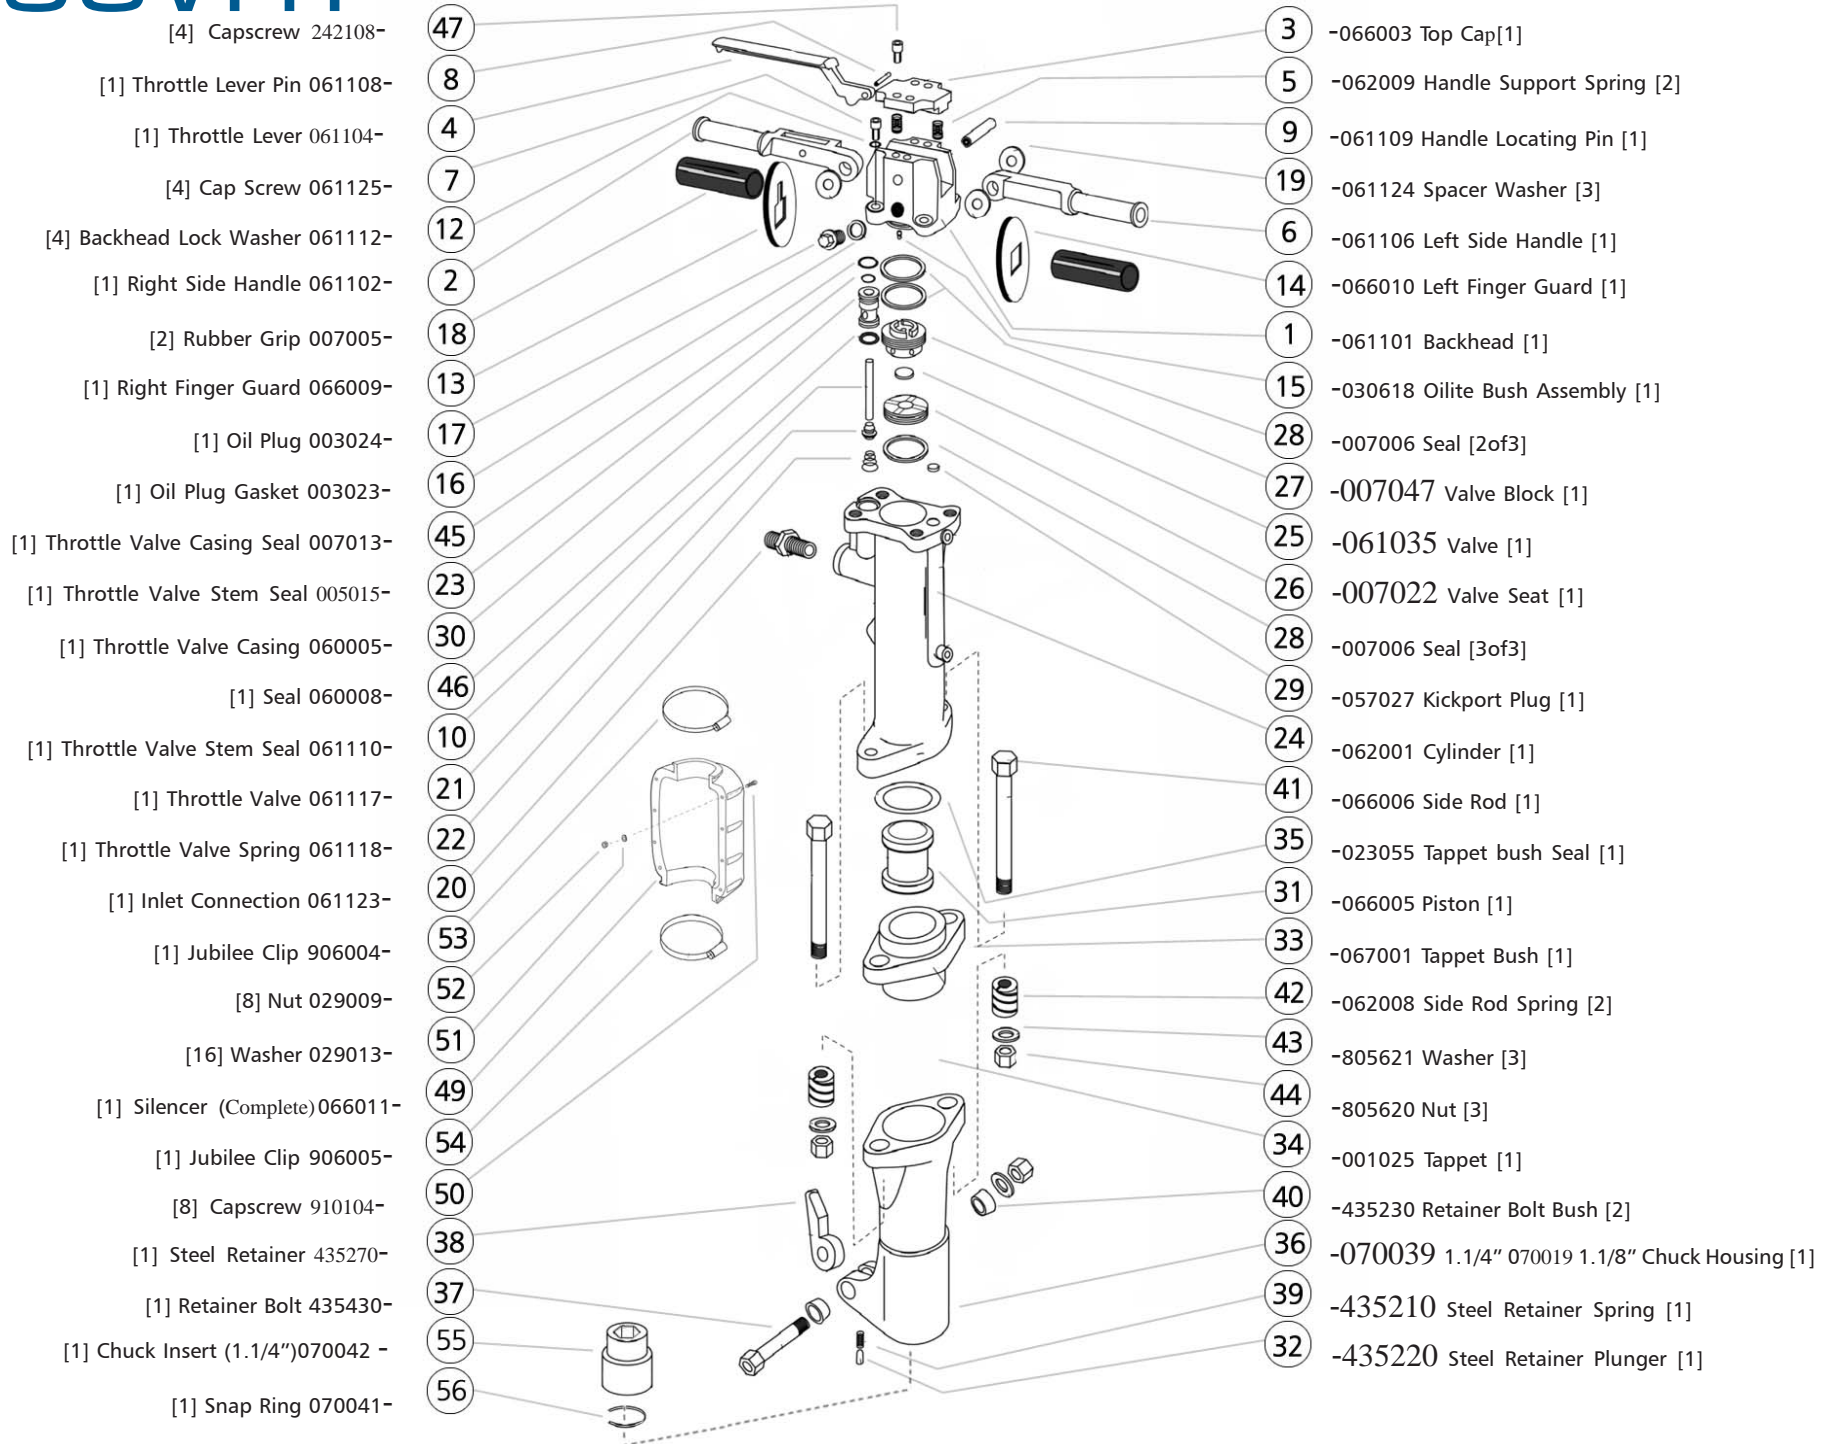

- [4] Capscrew 242108-
- [1] Throttle Lever Pin 061108-
- [1] Throttle Lever 061104-
- [4] Cap Screw 061125-
- [4] Backhead Lock Washer 061112-
- [1] Right Side Handle 061102-
- [2] Rubber Grip 007005-
- [1] Right Finger Guard 066009-
- [1] Oil Plug 003024-
- [1] Oil Plug Gasket 003023-
- [1] Throttle Valve Casing Seal 007013-
- [1] Throttle Valve Stem Seal 005015-
- [1] Throttle Valve Casing 060005-
- [1] Seal 060008-
- [1] Throttle Valve Stem Seal 061110-
- [1] Throttle Valve 061117-
- [1] Throttle Valve Spring 061118-
- [1] Inlet Connection 061123-
- [1] Jubilee Clip 906004-
- [8] Nut 029009-
- [16] Washer 029013-
- [1] Silencer (Complete) 066011-
- [1] Jubilee Clip 906005-
- [8] Capscrew 910104-
- [1] Steel Retainer 435270-
- [1] Retainer Bolt 435430-
- [1] Chuck Insert (1.1/4") 070042 -
- [1] Snap Ring 070041-

- 3 -066003 Top Cap [1]
- 5 -062009 Handle Support Spring [2]
- 9 -061109 Handle Locating Pin [1]
- 19 -061124 Spacer Washer [3]
- 6 -061106 Left Side Handle [1]
- 14 -066010 Left Finger Guard [1]
- 1 -061101 Backhead [1]
- 15 -030618 Oilite Bush Assembly [1]
- 28 -007006 Seal [2of3]
- 27 -007047 Valve Block [1]
- 25 -061035 Valve [1]
- 26 -007022 Valve Seat [1]
- 28 -007006 Seal [3of3]
- 29 -057027 Kickport Plug [1]
- 24 -062001 Cylinder [1]
- 41 -066006 Side Rod [1]
- 35 -023055 Tappet bush Seal [1]
- 31 -066005 Piston [1]
- 33 -067001 Tappet Bush [1]
- 42 -062008 Side Rod Spring [2]
- 43 -805621 Washer [3]
- 44 -805620 Nut [3]
- 34 -001025 Tappet [1]
- 40 -435230 Retainer Bolt Bush [2]
- 36 -070039 1.1/4" 070019 1.1/8" Chuck Housing [1]
- 39 -435210 Steel Retainer Spring [1]
- 32 -435220 Steel Retainer Plunger [1]

- 47
- 8
- 4
- 7
- 12
- 2
- 18
- 13
- 17
- 16
- 45
- 23
- 30
- 46
- 10
- 21
- 22
- 20
- 53
- 52
- 51
- 49
- 54
- 50
- 38
- 37
- 55
- 56